


Winterization Guide

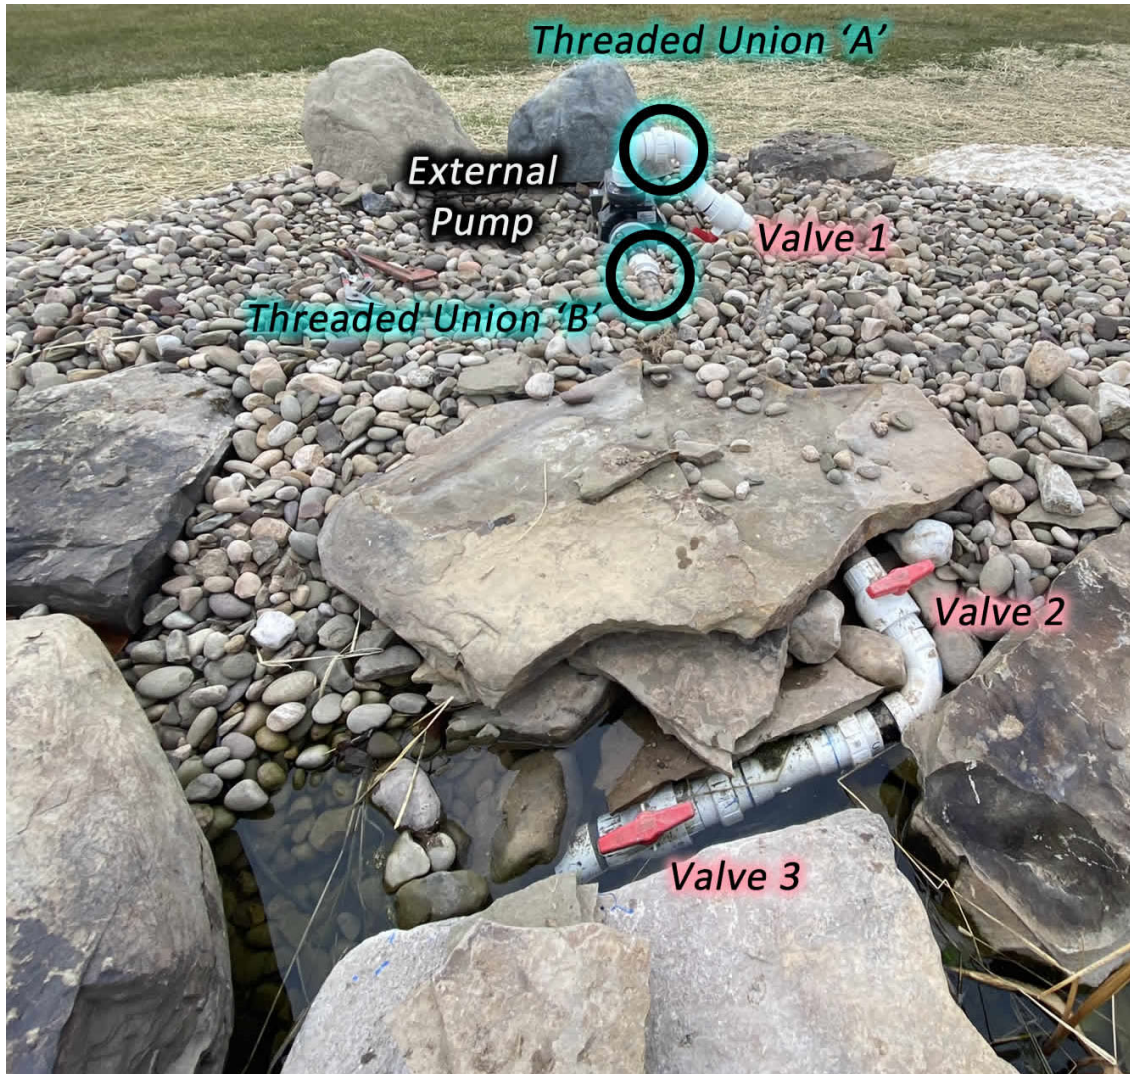

Summer Operation

Valves in Photo above are shown in summer positions


Valve 1 is open to allow flow from External Pump to Waterfalls

Valve 2 is closed

Valve 3 is open to allow flow from Submersible Pump (not shown) to underwater jets.

Winter Operation

In winter the External Pump is turned off and the flow from the Submersible Pump is changed from the underwater jets to the waterfall.

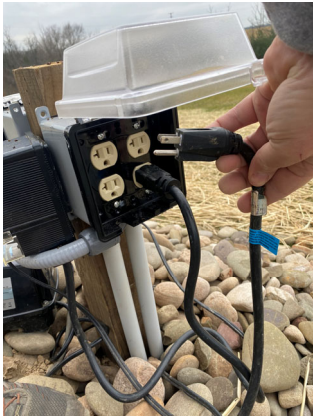

**1. Unplug External Pump
(Pump cord has blue tag on it)**



2. Close Valve #1




3. Unthread Union "A"



4. Unthread Union "B"



**5. Turn pump over and
drain water out of pump body**

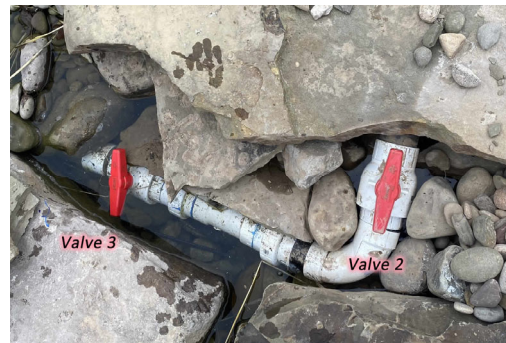

**6. Open Valve 2 then Close Valve 3.
In this setup water is flowing from the submersible pump to the waterfall**